

STEP 1

Pull the tilt lever as though tilting the rack until the pin pulls forward and out of the detent. Do not let the pin re-engage.



STEP 2

While the detent is disengaged, undo the large axle bolt (indicated by the arrow).



STEP 3

Remove the lower subframe. Disconnect the lights wiring from the subframe if applicable.



STEP 4

Add the hitch kit lower and replace the axle bolt. Replace the light cable lugs if applicable.



STEP 5

Rotate the upper and lower parts of the rack together until the pin re-engages.